

Panasonic BD30 / BD50 Blu Ray & DVD Region Switch

In order to switch region codes, put the player into the **standby** mode and press one of the following key sequences:

Key Sequence	DVD Region Code	BD Region Code
[1] [OK] [POWERON]	1	A
[2] [OK] [POWERON]	2	B
[3] [OK] [POWERON]	3	C
[4] [OK] [POWERON]	4	B
[5] [OK] [POWERON]	5	B
[6] [OK] [POWERON]	6	B

Attention: The remote has to be set to remote code 1. It is not possible to switch region codes using remote code 2 and remote code 3. The player is shipped with remote code 1 enabled.

The player can be reprogrammed to listen to any of those three codes in the setup menu section general.

The remote control can be reprogrammed to any of those three codes by pressing and holding the number button and [OK] for five seconds.

If you want to keep your player on remote code 2 or 3 but still want to switch region codes, please first reprogram the remote to code 1, then switch the region code and then revert to either remote code 2 or 3 and turn the player on.

Installation

In order to install the kit, please wire the chip according to this table. Please read the general.pdf if you do not know the pin numbering on your microcontroller.

Cable Color	Chip Pin Number	Signal
Rot	1	+5V
	2	N/C
Blau	3	ON/OFF
Grau	4	IR
Violett	5	Data
Grün	6	Clk
	7	N/C
Braun	8	GND



